

Decimator MD-QUAD

- MultiView SDI de 4 pantallas
- Enrutador de señal a pantalla completa
- Conversion SDI a HDMI
- Salidas SDI y HDMI
- Indicador de Tally
- Vumetros de Audio
- Rotación de Pantalla vertical y horizontal
- Generador de Barras
- Generador de tono de audio
- Tamaños de ventana ajustable
- Control por Software
- Titulador de Ventanas



MultiView SDI de 4 pantallas



Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad) **Load Defaults** **Update Firmware**

DECIMATOR DESIGN
www.decimator.com

Status Control Multi-View **Layouts** Routing UMDs Audio Meters Flip Colours GPI S <>

Mode 1920x1080 Windo... 4 Layout 1 - 100% no Border Read Write Default

Windows **Aspects** UMDs Status Tallies Meters

	HD In Aspe...	SD In Aspect
1	16:9	4:3
2	16:9	4:3
3	16:9	4:3
4	16:9	4:3

PROSERVICE

Show Border Show Aspect

Show Input Aspect HD SD

Default SD Output A... 4:3 16:9

Default Gap Size < 2 >

Reset All

MultiView SDI de 4 pantallas



Enrutador de salida a pantalla completa



www.decimator.com

Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults Update Firmware

PROSERVICE

Status Control **Multi-View** Layouts Routing UMDs Audio Meters Flip Colours GPI S <>

Output Select Window 2

Multi-Viewer Output Format HD 1920x1080i59.94

Multi-Viewer Number of Windows 4

Multi-Viewer Layout 1 - 100% no Border

Multi-Viewer Audio Source Window 2

Multi-Viewer Reference Free-run

Full Screen is Scaled

On Screen Input Format Enable Show only for 5 seconds after lock

On Screen Audio Source ID Show only for 5 seconds after lock

Apply Tally to Tally Boxes

Tally Transparency 25%

Enrutador de salida a pantalla completa



Enrutador de salida a dos pantallas



PROSERVICE



PMW-EX3

Apple TV

Enrutador de salida a tres pantallas



PROSERVICE



PMW-EX3



Apple TV



Bars

indicador de Tally

PROSERVICE



www.decimator.com

Available Devices = 1


Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults **Update Firmware**

Status Control Multi-View Layouts Routing UMDs Audio Meters Flip Colours **GPI** S < >

GPI Configuration 0

- PIN 1** = Tally 1 Enable
- PIN 2** = Tally 2 Enable
- PIN 3** = Tally 3 Enable
- PIN 4** = RS485+
- PIN 5** = RS485-
- PIN 6** = Tally 4 Enable
- PIN 7** = Toggle Outputs between MultiView, In1, In2, In3 and In4
- PIN 8** = Ground

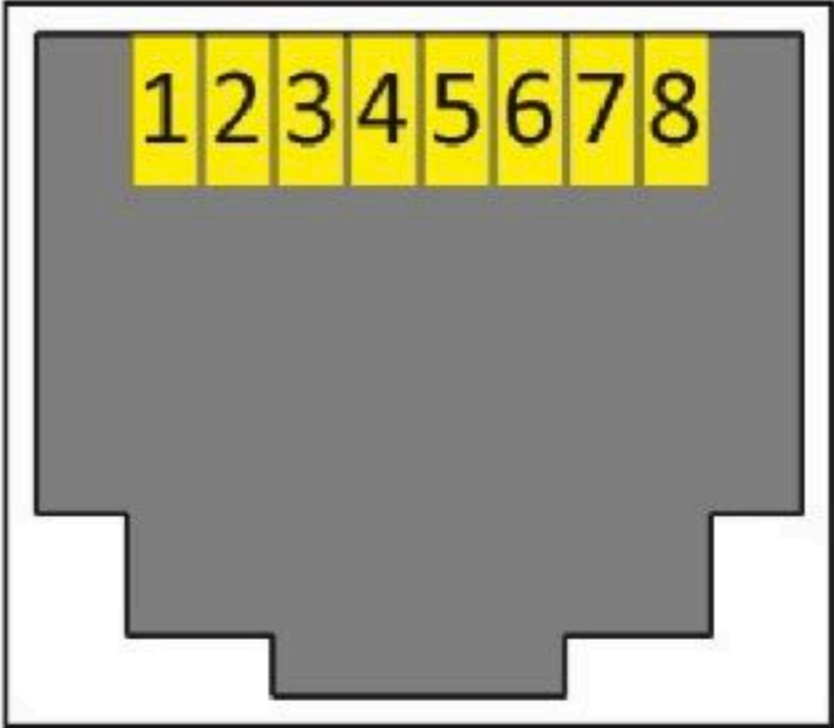

Enable the Function of the GPI Pin by connecting it to Ground

Rotación de Pantalla vertical y horizontal



Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults **Update Firmware**

DECIMATOR DESIGN
www.decimator.com

Status Control Multi-View Layouts Routing UMDs Audio Meters **Flip** Colours GPI S < >

All On **All On**
All Off **All Off**

Horizontal Flip **Veritcal Flip**

1	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>

PROSERVICE


Generador de Barras



Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults Update Firmware



www.decimator.com

Status **Control** Multi-View Layouts Routing UMDs Audio Meters Flip Colours GPI S <>


HDMI Output 1 Type HDMI RGB 4:4:4, 2 Audio channels passed

Test Pattern Enable

Test Pattern SMPTE HD Bars

Test Audio 1kHz Tone

3G-SDI Output Format A B




Control de Vumetro



Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults **Update Firmware**



www.decimator.com

Status Control Multi-View Layouts Routing UMDs **Audio Meters** Flip Colours GPI S < >

Pairs on Left			Pairs on Right			
	0	1	2	0	1	2
1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
2	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
3	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
4	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>

Combination	Bar and Float	
Transparency	0%	
Show Bar Scale	<input checked="" type="checkbox"/>	
Bar Scale	AES/EBU	
Bar Ballistics	VU	
Float Ballistics	IEC2	
Reference Level	-20 dBFS	
Yellow Start (-dBFS)	10,0	
Green Start (-dBFS)	20,0	

Indicador de Status de entradas



Available Devices = 1

Scan MD-QUAD 3 (MQC52691 / Multiview Quad)

Load Defaults Update Firmware

DECIMATOR DESIGN
www.decimator.com

Status Control Multi-View Layouts Routing UMDs Audio Meters Flip Colours GPI S < >

Custom Name	Multiview Quad
Firmware Version	2.0
Input 1 Status	HD 1920x1080i59.94
Input 2 Status	3G-B 1920x1080p59.94
Input 3 Status	Unlocked
Input 4 Status	Unlocked